



Adek FAQs

Can I cut boards to a Mitre finish?

Yes, however you will need a chop saw with the ability to cut up to 417mm.

Can I have a Picture frame finish for the edge of my decking?

Yes.

Can I use my boards in a vertical plane i.e. use it to clad a wall?

Please contact our Technical Department for further information.

My deck board is damaged?

For minor scratches please use our touch up pens (available to buy from Ecodek).

For major impacts and gouges you will need to replace either the Channel Cover or the Adek board.

To remove a channel simply use a Channel key to pull up damaged Channel Cover and replace.

To remove an Adek board, use a Channel key to pull up both Channel Covers and unscrew the Adek board.

How do I clean Adek?

We recommend that you do not Jetwash the boards - a brush and hose pipe with water should be more than sufficient. More stubborn stains either try Simply Gone or contact our Technical Department.

What saw blade do I need for cutting Adek?

For the chop saw you will need a saw to cut 300mm for the width of the deck. The blade should be a TCT blade with a high number of teeth such as the Freud TCT Circular Saw Blade 305x30mm 96T or the Makita TCT Circular Saw Blade 305x30mm 80T.

For the circular saw to rip down the length you will need a similar TCT blade such as the Erbauer Circular Saw Blade 165x20mm 40T.

Please contact our Technical Department for any further information: technical@ecodek.co.uk